
MODEL 30 FLUORESCENT

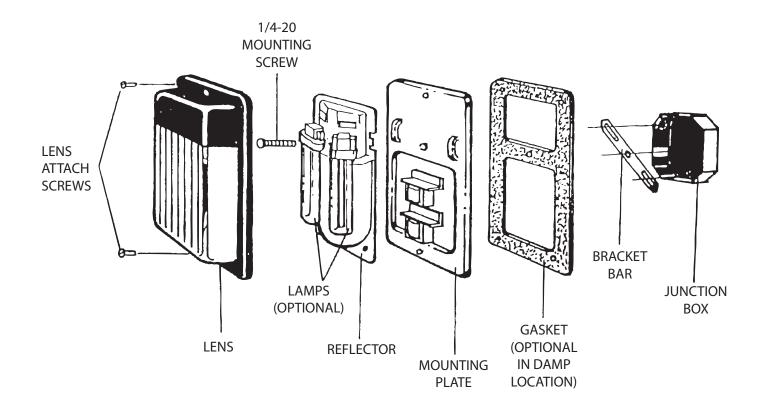

Model 30-S Shown

Reflector provided on Models 30-S and 30-D for 7 watts or 9 watts only.

W Harris Lighting, Inc.

Innovative Lighting Designs Since 1970

4015 Airport Ext. Road • Monroe, NC 28110 • USA (704) 283-7477 • (704) 283-6880 (FAX) • (800) 842-9345 (TOLL FREE) www.wfharrislighting.com • customerservice@wfharris.com

INSTALLATION INSTRUCTIONS FOR MODEL 30

MUST BE INSTALLED BY QUALIFIED ELECTRICIAN.

SAVE THESE INSTRUCTIONS.

IMPORTANT SAFEGUARDS

WHEN USING ELECTRICAL EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED INCLUDING THE FOLLOWING. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- Do not mount near gas or electric heaters.
- Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- The use of accessory equipment not recommended by the manufacturer may cause an unsafe condition.
- Do not use this equipment for other than intended use.
- Do not install or use in areas with a potentially explosive atmosphere.

INSTRUCTIONS

- 1. VERIFY FIXTURE VOLTAGE RATING MATCHES SUPPLY VOLTAGE.
- 2. Turn off power at source.
- 3. Remove lens from fixture.
- 4. Connect appropriate wires.
- 5. Connect ground wire to ground hole in mounting plate, or to ground lead, or to ground hole in crossbar, whichever of these methods will ground the fixture properly in your particular situation.
- 6. Install crossbar on existing junction box.
- 7. Insert ¼x20 screw through reflector, mounting plate,and gasket. If purchased without reflector, insert screw through mounting plate and gasket.
- 8. Align fixture and gasket with junction box.
- 9. Tighten ¼ x20 screw affixing fixture to mounting surface.
- 10. Straighten gasket as you are tightening screw to insure that a good water seal will be achieved under edge of lens. If you have purchased this fixture without gasket, use a non-hardening caulk to insure a watertight seal.
- 11. If fixture is mounted on an irregular surface in a wet location, a non-hardening caulk should be used to fill in spaces caused by the irregular mounting surface.
- 12. Install lamp(s).
- 13. Install leads and tighten the two 8x32 screws which secure the lens to the mounting plate.

WARRANTY INFORMATION

W. F. Harris Lighting, Inc. warrants all manufactured fixtures to be free from defects in materials and workmanship when properly maintained, under normal use and service, for a period of one (1) year from date of shipment. LED arrays and LED drivers are warrantied for a period of five (5) years from date of shipment. W. F. Harris Lighting, Inc. will repair or replace any polycarbonate lens or housing against breakage for the lifetime of the installation. Yellowing of the polycarbonate lenses is part of the natural aging process and is not covered by this warranty.

W. F. Harris Lighting, Inc. reserves the right to issue credit, repair or replace the defective merchandise as its option. W. F. Harris Lighting, Inc. also reserves the right to examine the defective products prior to warranty approval. Original proof of purchase is required for any warranty consideration, and warranty is extended only to original purchaser and not transferrable.

A Return Goods Authorization (RGA) number is required from W. F. Harris Lighting, Inc. and the product may be returned directly to W. F. Harris Lighting, Inc., 4015 Airport Ext Rd, Monroe NC 28110. A representative is available during standard business hours by calling our toll-free number 800-842-9345 to provide immediate resolution of any field problems encountered with W. F. Harris Lighting, Inc. products. All products shipped back to W. F. Harris Lighting, Inc. must be carefully and properly packed and transportation and insurance must be prepaid.

W. F Harris Lighting, Inc. is not responsible for damage to its products through direct or near lightning strikes, natural disasters, natural aging, improper installation, maintenance, use or attempts to operate product above its rate capacity or voltage, intentionally or otherwise or for unauthorized repairs. Failure to notify W. F. Harris Lighting, Inc. of unsatisfactory operation; improper installation; improper or unauthorized maintenance, repairs, or adjustments; or use in applications for which it is not intended shall terminate this Warranty and shall relieve W. F. Harris Lighting, Inc. from any further responsibility hereunder. Destruction by fire, paint, or acid is not covered by this warranty.

Warranty does not cover and W. F. Harris Lighting, Inc. is not responsible for labor or freight costs incurred in connection with installation, removal or replacement of products on the job site and will not honor consequential or incidental damages arising from the use of the products. W. F Harris Lighting, Inc. agrees only to put into proper operating condition, or at W. F. Harris Lighting, Inc.'s option, replace such products. W. F Harris Lighting, Inc.'s entire liability of any claim of loss or damage resulting from a defective product is limited to the replacement of the product.

The foregoing warranty is exclusive of all other warranties and no other warranties of any kind are expressed or implied.